MOUNTING INSTRUCTIONS

ABSORBER

These instructions are for the following product: PET Ceiling Absorber 180, PET Ceiling Absorber 120

TIP:

Make sure to examine the condition and load carrying capacity of the ceiling before installation.



TOOLS

The following tools are needed for installation:

✓ Level ✓ Drilling machine

√ Pencil

√ Folding ruler
√ Drill bits


MOUNTING ACCESSORIES

The following mounting accessories are included for installation of the absorber:

 \checkmark 4 × dowel \checkmark 4 × adjustable wire rope \checkmark 4 × screw M4×40 \checkmark 1 × PET fleece absorber

√ 4 × screw hook

√ 1 × drilling template

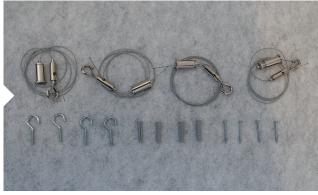



UNBOXING

Open the package carefully! Inserting sharp objects into the package can damage the absorber. Avoid using long, sharp tools for opening the package!

REMOVE PRODUCTS FROM PACKAGING

Carefully remove the products from the package and read the mounting instructions carefully. Remove the mounting accessories and the absorber.




Lakustik

USING THE TEMPLATE / DETERMINE THE POSITION

Align and attach the template to the ceiling. Use the template to mark the drilling locations through the paper using a pencil.

Alternatively you can measure the distances of the dowels inserted in the absorber and mark the measured distances for the drilling holes at the ceiling.

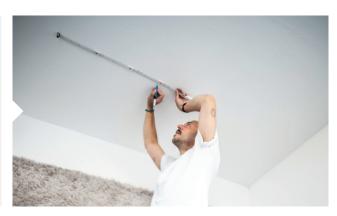



DRILL THE HOLES

Drill the holes at the markings using the drilling machine.

INSERT DOWELS + FASTEN HOLDER

Insert the dowels into the drilled holes and fasten the holder of the wire ropes with four screws M4×40 to the ceiling.

Make sure that the included screws are suitable for the condition of the ceiling.





FIX THE WIRE ROPE

Insert the four screw threads of the wire ropes in the holder and fasten the screw threads. Make sure that the wire ropes are guided through the recess of the holder.

FIX SCREW HOOKS

Screw the four screw hooks in the dowels inserted in the absorber.



takustik



FIX THE ABSORBER TO THE WIRE ROPES

Insert the hooks of the adjustable wire ropes into the screw hooks of the absorber.

ADJUSTING HEIGHT

Adjust the height of the absorber as you wish.

Fix the excess wire rope using cable straps.





USING ABSORBER

Now you can use the absorber.









This product is intended to be used to optimise the room acoustics. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.